

# USER GUIDE

LiFePO4 Battery System for Households



LiFePO4 Battery System for Households

# Contents

<b>1 ABOUT THIS MANUAL</b> .....	1
1.1 Purpose .....	1
1.2 Scope .....	1
1.3 Safety Instructions .....	1
<b>2 INTRODUCTION</b> .....	2
2.1 Features.....	2
2.2 Product Overview .....	2
2.3 Specifications .....	4
2.4 Recommended Settings .....	4
<b>3. INSTALLATION</b> .....	5
3.1 Unpacking and Inspection .....	5
3.2 Mounting the Unit .....	5
3.3 Connection for Parallel Mode .....	6
<b>4. OPERATION</b> .....	8
4.1 Switch On/Off.....	8
4.2 Description for LED .....	9
4.3 ON / OFF or SOC Led (Mode or SOC) .....	9
4.4 DIP switch SW1-SW4 Description .....	10
<b>5. EMERGENCY SITUATIONS</b> .....	10
5.1 Fire .....	10
5.2 Leaking Batteries .....	10
5.3 Wet Batteries .....	10
5.4 Damaged Batteries .....	10
5.5 Warranty .....	10

## 1 ABOUT THIS MANUAL

### 1.1 Purpose

This manual describes the introduction, installation, operation and emergency situations of the battery bank. Please read this manual carefully before installations and operations. Keep this manual for future reference.

### 1.2 Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

### 1.3 Safety Instructions



**WARNING:** This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

1. Before using the unit, read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. CAUTION --- To reduce risk of injury, damage, even burst, please use it following using manual. In case of causing personal
3. Do not disassemble the battery. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of fire.
4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
5. CAUTION – Only qualified personnel can install this device with inverter.
6. For optimum operation of this battery, please follow required spec to select appropriate cable size.
7. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion or fire.
8. Please strictly follow installation procedure.
9. To support full output load, at least 2 sets of LPBF48V for inverter larger than 6KVA in parallel connection.
10. **GROUNDING INSTRUCTIONS** - This System should be connected to a permanent grounded wiring system. Be sure to comply with local requirements.
11. NEVER cause AC output and DC input short circuited. Do not connect to the mains when DC input short circuits.
12. Warning!! Only qualified service persons are able to service this device.
13. Battery should be installed indoor and kept away from water, high temperature mechanical force and flames.
14. Do not install the battery in any environment of temperature below 0°C or over 55°C, and humidity over 80%.
15. Do not put any heavy objects on the battery.

### 1.4 Can be connected in parallel

**1. The batteries can be connected in parallel. Series connection is not allowed.**

**Use in upright position only.**

**2. The batteries are not allowed to connected with PWM controller for charging.**

**Special Attention:** Due to the built-in protection board of the lithium battery pack is with over-discharge protection function, it is strongly recommended to stop using the load when the battery pack is over-discharged. The battery pack cannot be repeatedly activated for discharge. Or the battery may be failed to be activated by the AC or PV activation cable (It requires a special charging activation method), so cannot be charged. Therefore, when the battery pack is low power, please charge the battery as soon as possible when main power or solar energy is available.


## 2. INTRODUCTION

The battery system main using Solar power system for Family house. It also have a with to controller the battery easily and protect our Household application timely.

### 2.1 Features


- LiFePO4: Higher safe performance and longer cycle life.
- Multiple Protection: Built-in smart BMS and Fuse.
- Flexible Installation: Wall-Mounted or Floor-Mounted.
- Wide Compatibility: Compatible with leading inverter brands.
- High Scalability: Capacity up to 60kWh.
- Long Warranty: 5 Years.

### 2.2 Product Over View

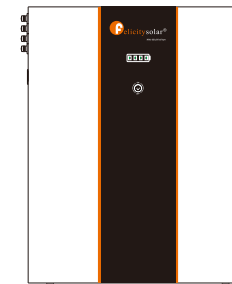


48V Front view


LPBF48200-P

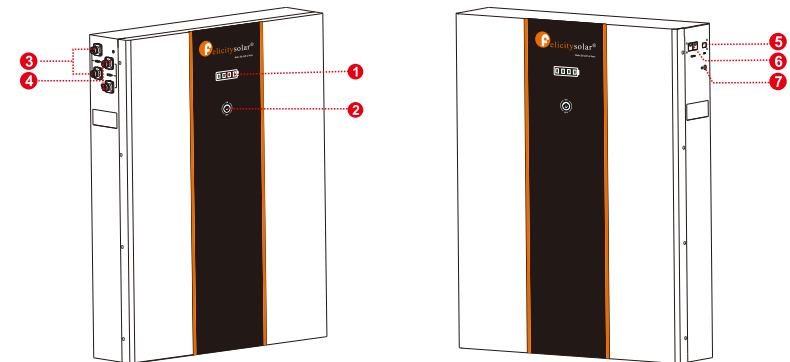

LPBF24200-M

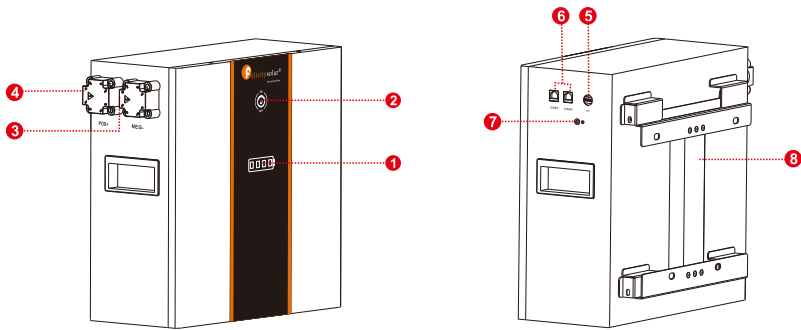

LPBF48150-M&LPBF48200-M&LPBF48150-P

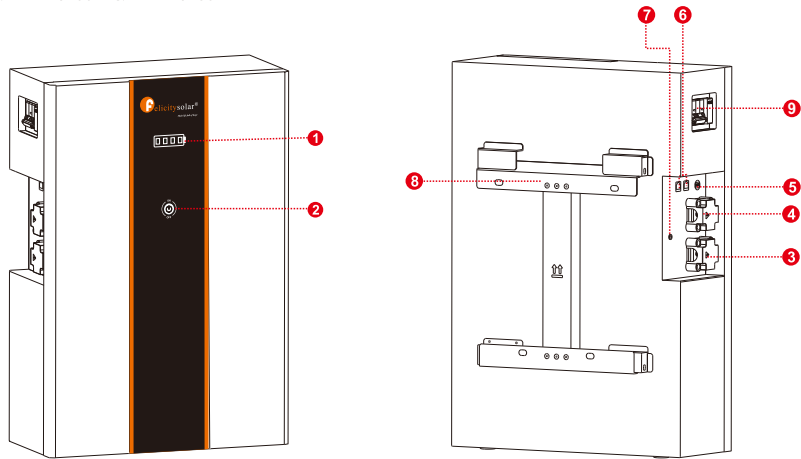

- 1. LED display
- 2. Power On/Charging indicator
- 3. Battery Negative -
- 4. Battery Positive +
- 5. Switch
- 6. Communication port
- 7. Earth wire
- 8. Wall mounted fixing
- 9. Breaker

### 2.3 Specifications

Model	LPBF24200-M	LPBF48150-M	LPBF48150-P	LPBF48200-M	LPBF48200-P
Capacity	5kWh	7.5kWh	7.2kWh	10kWh	10kWh
Battery Type	LiFePO4	LiFePO4	LiFePO4	LiFePO4	LiFePO4
Nominal Voltage	25.6V	51.2V	51.2V	51.2V	51.2V
Operating Voltage	24-28.8V	48-57.6V	48-57.6V	48-57.6V	48-57.6V
Recommend Charge/Discharge Current[1]	≤80A	≤60A	≤60A	≤80A	≤80A
Recommend Charge/Discharge Power[1]	≤2,000W	≤3,000W	≤3,000W	≤4,000W	≤4,000W
Maximum Charge/Discharge Current(15s)	120A	120A	120A	120A	120A
Maximum Charge/Discharge Power(15s)	3,000W	6,000W	6,000W	6,000W	6,000W
Depth of Discharge(DOD)	≥95%				
Scalability	Up to 6 units in parallel				
Communication	RS485 / CAN				
Protection Level	IP21				
Cycle Life[2]	≥ 6000 Cycles				
Charging Temperature Range	0-55°C				
Discharging Temperature Range	-20-60°C				
Display	LCD+LED	LED	LED	LCD+LED	LCD+LED
Installation	Wall-Mounted / Floor-Mounted				
Protection	Built-in smart BMS, Fuse				
Warranty	5 Years				
Net Weight	39kg	53.8kg	57kg	74kg	70.5kg
Gross Weight	44kg	67.7kg	64kg	90kg	91kg
Product Dimension	450x415x213mm	620x410x205mm	665x430x205mm	685x475x213mm	755x600x160mm
Package Dimension	537x537x298mm	720x510x360mm	787x552x288mm	780x570x375mm	855x 700x340mm
[1] Recommend charge/discharge current/power is affected by temperature and SOC.					
[2] Test conditions: 0.2C Charging/Discharging @25°C, 80% DOD.					

### 2.4 Recommended Settings

Lithium battery pack is not same as lead-acid battery, so for the devices which you connect with the battery pack for charging or discharging, such as inverters, MPPT charger controllers or UPS, please implement pre-settings as recommended settings as below before you launched them.

Setting	LPBF24200-M	LPBF48150-M	LPBF48200-M	LPBF48150-P	LPBF48200-P
Max. Charging Voltage	28.8V	57.6V			
Floating charging Voltage	28.8V	57.6V			
Max. Charging Current	80A*N	60A*N	80A*N	60A*N	80A*N
Cut-off voltage	24V	48V			

Notes: "N" means the number of battery packs connected in parallel.

### 3. INSTALLATION

#### 3.1 Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package.

NO	NAME	SPECIFICATION	PICTURE
1	Wall mount	Wall mount bracket	
2	RS485 cable	Battery terminal:5B6A PCS terminal:5B6A	
3	Communication line 2	Used for Communication among batteries	
4	Cables	Used for battery parallel connection	
5	Screw	Mounting screw	
6	User manual	User manual	
7	Guarantee card	Guarantee card	
8	Handle	Handle	
9	Universal communication cable	Flexibly match the communication cable of different inverters	
10	Ethernet connector	Ethernet connector	

**NOTE:** ①②③④⑤⑥⑦⑧⑨⑩ in LPBF48150-M&LPBF48200-M&LPBF48150-P


①②③④⑤⑥⑦⑧⑨⑩ in LPBF48200-P&LPBF24200-M

#### 3.2 Mounting the Unit

Consider the following points before selecting where to install:

- Do not mount the battery on flammable construction materials.
- The ambient temperature should be between 0°C and 45°C to ensure optimal operation.
- The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the right diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

	LPBF24200-M	LPBF48150-M	LPBF48200-M	LPBF48150-P	LPBF48200-P
A	87.5	66	117.5	85	140
B	240	240	240	240	320
C	108.5	175.5	208	195.5	159
D	234	301	301	301	401
E	185	323	388	368	357
F	234	301	301	301	401
G	76.5	147.5	180	172.5	198
H	137.5	116	167.5	135	180
I	140	140	140	140	240

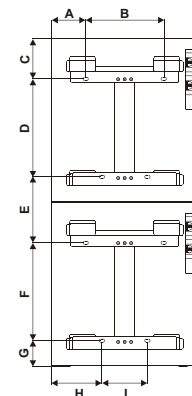


Please follow below steps to implement battery connection:

1. Assemble battery ring terminal based on recommended battery cable and terminal size.
2. Connect all battery packs as units requires. It's suggested to connect at least 2 sets of LPBF48V for inverter larger than 7.5KVA in parallel connection.


**Note: if you need the battery wake-up when the grid back, connect the battery with grid use power adapter and communication line 1 shown in the package list.**

#### 3.3 Connection for Parallel Mode

The eStrong LPBF series battery support to be connected in parallel for expansion. If you need one more battery bank work in parallel mode, connect the battery as shown in PIC 2

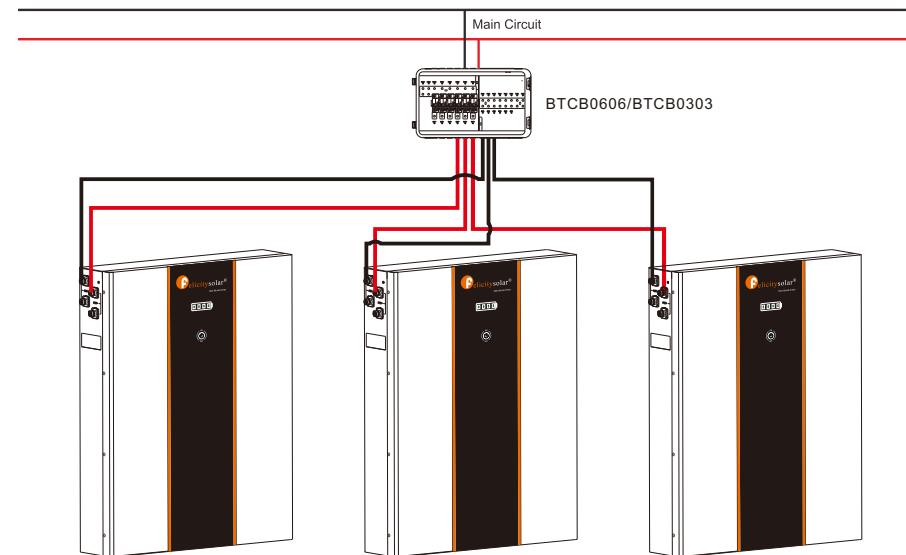


Schematic diagram of parallel connection of battery packs(LPBF48200-P)

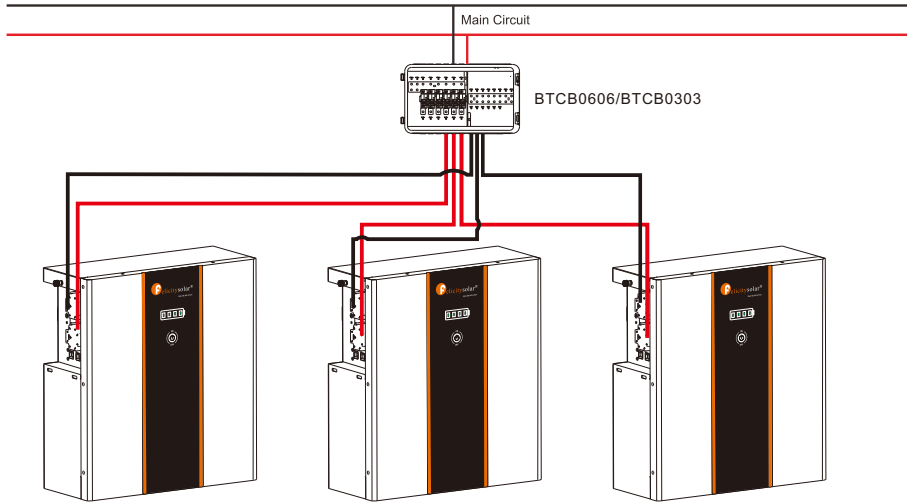

Schematic diagram of parallel connection of battery packs (LPBF48150-M&LPBF24200-M&LPBF48200-M&LPBF48150-P)


**Note:** After completing the above steps, arbitrarily select the positive and negative poles of one of the battery packs to output. After confirming the correct connection of the inverter, controller and battery, you can turn on any of the switches and use the battery group happily.

For pure off grid system ,the PV awake wire need to be connected with MPPT charge controller if the battery pack is charged by solar panels only . The connection diagram as below :

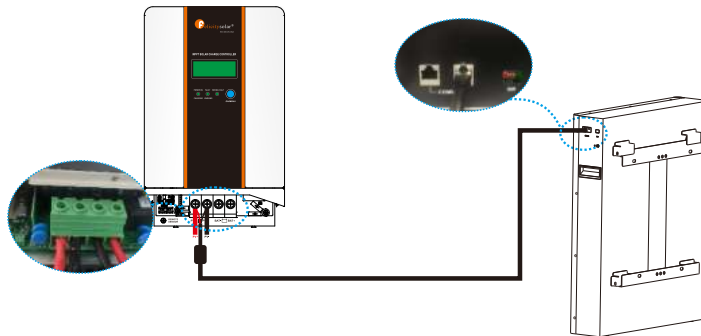

## 4. OPERATION

Once the batteries are connected well, simply press On/Off button to enable the output of the battery pack.

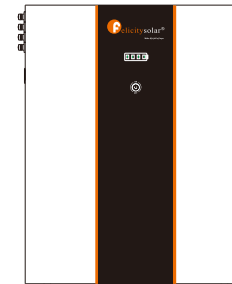

48V Front view

### 4.1 Switch On / Off

- 1.Switch on: press On/Off button to switch on the battery, then the battery will do self-inspection before enable output. The LCD will show the SOC.
- 2.Switch off: press and hold On/Off button for 1to3 seconds, the battery will shut down directly.

Description for Communication port

Picture	PIN	Description
	1	Trigger-GND
	2	Trigger-VCC
	3	CANL-PCS
	4	CANH-PCS
	5	RS485-B
	6	RS485-A
	7	CANL
	8	CANH

DIP SWITCH		
	1-4	Communication Address
	5	Termination Resister

### 4.2 Description for LED

The SOC of the battery is shown by the LED

100%	75%	50%	25%	Flashing SOC < 10%

Note: The battery need to be fully charged for at least once in one month to ensure the accurate SOC calculation.

4.3 ON / OFF or SOC Led (Mode or SOC)

BATTERY MODE	ON/OFF		SOC				REMARK
	GREEN LED	RED LED	LED1	LED2	LED3	LED4	
POWER OFF	OFF	OFF	OFF	OFF	OFF	OFF	
POWER ON	OFF	ON	ON	ON	ON	ON	
STANDBY	OFF	OFF	SOC				SOC < 10% (DEFAULT): LED1 FLASH
NORMAL	ON	OFF	RUNNING/SOC				SOC < 10% (DEFAULT): LED1 FLASH
DISCHARGE	ON	OFF	SOC				SOC < 10% (DEFAULT): LED1 FLASH
CHARGE	FLASH	OFF	RUNNING				
LOW POWER	FLASH	OFF	OFF				
FAULT	OFF	ON	ON	OFF	OFF	OFF	BATTERY VOLTAGE HIGH
			OFF	ON	OFF	OFF	BATTERY VOLTAGE LOW
			ON	ON	OFF	OFF	CELL VOLTAGE HIGH
			OFF	OFF	ON	OFF	CELL VOLTAGE LOW
			ON	OFF	ON	OFF	CHARGING CURRENT HIGH
			OFF	ON	ON	OFF	DISCHARGING CURRENT HIGH
			ON	ON	ON	OFF	BMS TEMPERATURE HIGH
			OFF	OFF	OFF	ON	BMS TEMPERATURE LOW
			ON	OFF	OFF	ON	CELL TEMPERATURE HIGH
			OFF	ON	OFF	ON	CELL TEMPERATURE LOW
ON	ON	OFF	ON	CURRENT SENSOR ABNORMAL			

4.4 DIP switch SW1-SW4 Description

DIP switch SW1-SW4 Description ①					DIP switch SW5 Description ②	
Sw1	SW2	SW3	SW4	Remarks	SW5	Remarks
0	0	0	0	means ID=0, communication address is 0x00/0x10 ③	1	means connect 120Ω resistor
1	0	0	0	means ID=1, communication address is 0x01 ④		
0	1	0	0	means ID=2, communication address is 0x02	0	means disconnect 120Ω resistor
1	1	0	0	means ID=3, communication address is 0x03		
0	0	1	0	means ID=4, communication address is 0x04		
1	0	1	0	means ID=5, communication address is 0x05		
0	1	1	0	means ID=6, communication address is 0x06		
1	1	1	0	means ID=7, communication address is 0x07		
0	0	0	1	means ID=8, communication address is 0x08		
1	0	0	1	means ID=9, communication address is 0x09		
0	1	0	1	means ID=10, communication address is 0x0A		
1	1	0	1	means ID=11, communication address is 0x0B		
0	0	1	1	means ID=12, communication address is 0x0C		
1	0	1	1	means ID=13, communication address is 0x0D		
0	1	1	1	means ID=14, communication address is 0x0E		
1	1	1	1	means ID=15, communication address is 0x0F		

Remark ①: 1 in SW1-SW5 indicates ON status, and 0 indicates OFF status.

Remark ②: When multiple battery packs communicate, the last battery pack SW5 needs to be in the ON status, otherwise the communication may have interference.

Remark ③: When the battery pack ID is set to 0, it means stand-alone operation, and it is not necessary to detect whether the parallel condition is satisfied ⑤

Remark ④: When the battery pack ID is set to 1-15, it means that the parallel operation is required, and it is necessary to detect whether the parallel condition is satisfied ⑤

Remark ⑤: The parallel condition is that the difference between the battery voltage of the local battery and all the battery pack voltages is < 3V, otherwise wait until the condition is satisfied

5. EMERGENCY SITUATIONS

Felicity cannot guarantee battery absolute safety.

5.1 Fire

In case of fires, make sure that the following equipment is available near the system.

- SCBA (self-contained breathing apparatus) and protective gear in compliance with the Directive on Personal Protective Equipment 89/686/EEC.
  - NOVEC 1230, FM-200, or dioxide extinguisher
- Batteries may explode when heated above 150°C. KEEP FAR AWAY from the battery if it catches fire.

5.2 Leaking Batteries

If the battery pack leaks electrolyte, avoid contact with the leaking liquid or gas. If one is exposed the leaked substance, immediately perform the actions described below.

- Inhalation: Evacuate the contaminated area, and seek medical attention.
- Contact with eyes: Rinse eyes with running water for 5 minutes, and seek medical attention.
- Contact with skin: Wash the affected area thoroughly with soap and water, and seek medical attention.
- Ingestion: Induce vomiting, and seek medical attention.

5.3 Wet Batteries

If the battery pack is wet or submerged in water, do not let people access it, and contact your supplier for help.

5.4 Damaged Batteries

Damaged batteries are not fit for use and are dangerous and must be handled with the utmost care. It may leak electrolyte or produce flammable gas. If the battery pack seems to be damaged, pack it in its original container, and then return it to your supplier.

5.5 Warranty

Products that are operated strictly in accordance with the user manual are covered by the warranty. Any violation of this manual may void the warranty.

Limitation of Liability

Any product damage or property loss caused by the following conditions, Felicity does not assume any direct or indirect liability.

- Product modified, design changed or parts replaced.
- Changed, or attempted repairs and erasing of series number or seals;
- System design and installation are not in compliance with standards and regulations;
- The product has been improperly stored in end user's premises;
- Transport damage (including painting scratch caused by movement inside packaging during shipping). A claim should be made directly to shipping or insurance company.